



YAMAHA

NIPPON GAKKI CO., LTD
P.O. BOX 1, HAMAMATSU, JAPAN

*Combo
Instruments*

SERVICE NEWS

DX-7

SUPPLEMENT TO
DX-7 OWNER'S MANUAL


BULLTIN NO. E 314

DATE: August, 1984

About Transmission/Reception of Voice Data for All 32 Voices between Two DX-7's

● **Symptom:**

Using two DX-7's, voice data for all 32 voices cannot be transmitted/received regardless the owner's manual instructions.

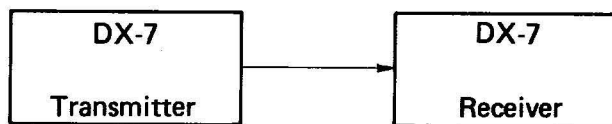

● **Servicing:**

Perform the following procedure.

On the DX-7 at the reception side:

- (1) Set the MEMORY PROTECT for INTERNAL voice to OFF.
- (2) Press the **8** key after setting the FUNCTION Mode.
- (3) Set the MIDI CH to CH 1.
- (4) Pressing the **8** key again will produce the display "SYS INFO AVAIL (UNAVAIL)".
- (5) If the display is "SYS INFO UNAVAIL", bring the display to "SYS INFO AVAIL".
- (6) Press the **14** key (Battery check) to prevent changing MIDI channel accidentally.
- (7) Press the **INTERNAL** key of MEMORY SELECT to enter the PLAY Mode.

On the DX-7 at the transmission side:

- (8) Pressing the **8** key twice after setting the FUNCTION Mode will bring the display to "SYS INFO AVAIL (UNAVAIL)".
- (9) If the display is "SYS INFO UNAVAIL", bring the display to "SYS INFO AVAIL".
- (10) Press the **8** key to bring the display to "MIDI TRANSMIT ?".
- (11) Press the **YES** key.

NOTE:

www.musictechnologiesgroup.com

Skipping Steps (6), (7) changes MIDI CH 1 to MIDI CH 2 at the receiver side (DX-7) and transmission/reception of voice data for all 32 voices cannot be effectuated.